

Brooklyn

Freestanding Bluetooth Turntable

BTR80L



Instruction Manual

Please read this manual carefully before using,
and keep it for future reference.

Contents

General Safety	4
Product Overview	7
Basic Operation	
Power Connection	8
Mode Selection	8
Phono (Record)	8
Bluetooth	9
USB/SD Card Encoding (recording)	9
USB/SD Card Media Playback	9
AUX IN	10
Headphone Jack	11
Specification	11
Customer Support	12

General Safety

Read this manual thoroughly before you start using the turntable.

Store this manual, the completed warranty card, your receipt and the product packaging. The safety precautions instructions reduces the risk of fire, electric shock and injury when correctly complied to.

Please follow all instructions and take notice of all warnings.

IMPORTANT INFORMATION

- Do not place the product on a high furniture without securing both the furniture and the product to a stable support.
- Do not place the product on cloth or other conductive materials.
- Warn children of the dangers of climbing on furniture to reach the product or its controls and to call for an adult to assist.

General Safety (Cont.)

IMPORTANT INFORMATION

- Do not expose this product to rain or moisture as it may result in fire or an electric shock hazard
- Do not temper or change or modify the product in any way.
- Only use Accessories outlined and recommended by the manufacturer.
- Please do not expose the product to splashing or water contact
- Please do not place any object on top of the product

This product must be positioned in a sufficiently stable location, it can be potentially hazardous due to falling when mounted and can cause injury, particularly to children if it positioned incorrectly.

- Do not plug several devices into the same outlet. Doing so may cause the outlet to overheat and start a fire. Make sure the outlet is readily accessible during operation of the equipment.
- The apparatus shall not be exposed to dripping or splashing and no objects filled with liquids, such as vases, shall be placed on the product. Dry location use only.
- No naked flame source, such as candles, should be placed on the product.
- Unplug this product during lightning storms or when unused for long periods of time. Not doing so may result in fire or electric shock.
- Do not cover the ventilation openings of the product with items such as newspapers, tablecloths, curtains etc or insert objects into the slots available on the products. As this could result in the product temperature rising and could cause a fire.

 
 
 
General Safety (Cont.)

- If you notice any unusual odors or smoke around the unit, immediately disconnect the unit from the outlet and contact the service center. Failure to do so may result in fire or electric shock.
- Please beware that Dust could accumulate over time on the unit and cause it to generate heat and or deteriorate insulation, which in turn may result in an electrical fire.
- The product is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or young children of any age, They must be supervised product by a person responsible for their safety.
- To maintain the product do not use any chemical or cleaning agent or wet cloth, please only ensure to utilize a dry cloth to wipe it down from marks or dust and only after unplugging the product from the power socket.
- Please ensure to contact our call center for any repair or service required for the products.

Please make sure upon positioning this product, the place is:

- Not wet or damp and Well ventilated
- Away from direct sunlight or heaters.
- Away from splashes or food.
- Protected from excessive dust or grease.
- Do not place this equipment in a confined space such as a bookcase or similar unit. Allow 20cm above and 5cm spacing on both sides for proper ventilation.
- Do not place the Product near heat sources such as radiators, stoves or other audio visual equipment that produce heat.
- Do not place containers with liquids, if liquid falls inside the products it may result in short-circuit, fire or electric shock.
- Do not place small metallic objects on top of the unit.
- Do not use or store flammable or combustible materials near the unit. Doing so may result in fire or explosion. Do not place any naked flame sources, such as lit candles, cigarettes or incense sticks on top of the product.

Product Overview

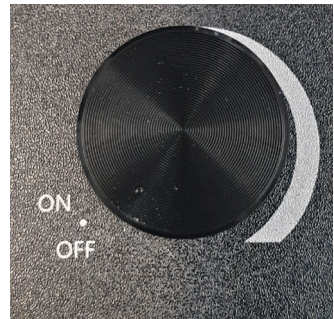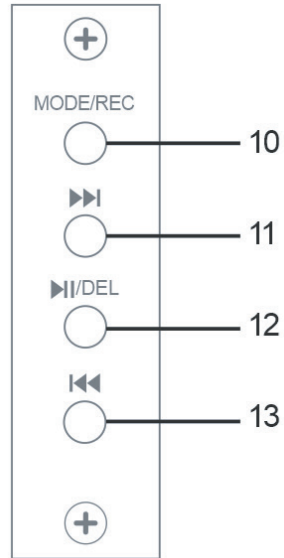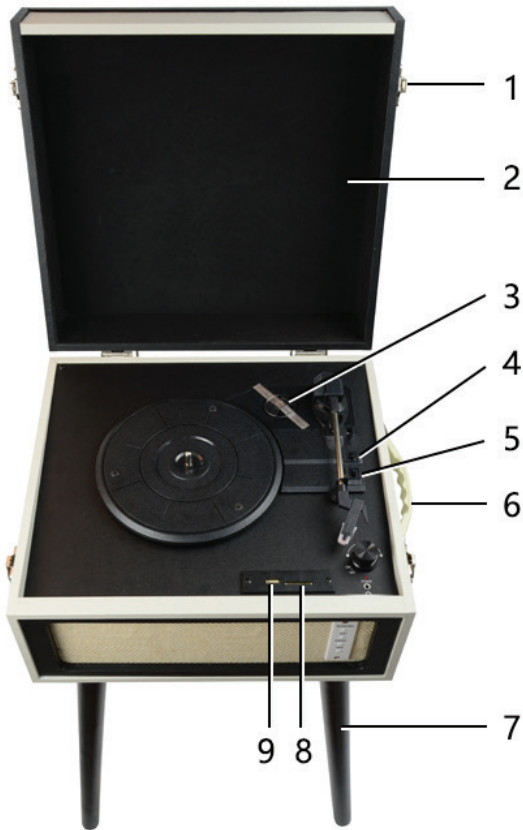

- 1. Lock Catch
- 2. Dust Cover
- 3. 45rpm adaptor
- 4. Speed Selection - 33, 45, 78 rpm
- 5. Auto Stop Control
- 6. Carrying Handle
- 7. Detachable Leg
- 8. SD Card Connector
- 9. USB Connector
- 10. Mode: Turntable/USB/SD/Bluetooth
- 11. Next Music
- 12. Pause/Play/DEL
- 13. Previous Music

Basic Operation

Power connection

1. Plug in the DC plug provided into the back of the turntable, then the USB into a powered USB Port.

Mode Selection

This Turntable automatically detects the mode you want to use.

- Bluetooth** - Default mode - will turn on automatically and will enter pairing mode.
- Turntable** - When you lift Turntable/RECORD PIN turntable will switch to REC mode.
- USB/SD** - When you plug in a USB or SD card, turntable will switch to the respective mode.

Phono (Record)

Before starting - Please action the following:

- Remove the stylus protector
 - Be sure that the tone arm is being detached from the tone arm rest before operating and resecured again after-use.
1. Place a record on the turntable player.
 2. Lift the RECORD Arm & Pin and the Turntable will automatically switch to RECORD mode.
 3. Set the Arm/Pin onto the RECORD DISC in the proper position depending on the record song to be played.

Note: to stop playing, lift up the Arm/Pin. To continue, place gently back onto the record.

6. When the record has finished, the platter will stop rotating.
7. Make sure to lift ARM/Pin up and place it back into the Arm park (where it sat originally when first opening the turntable).

Basic Operation (Cont.)

Bluetooth

1. When powering on the unit, the turntable will automatically enter Bluetooth pairing mode.
2. Search for **BTR80L** on your smart device BT settings
3. Once connected, you can play any song you desire.
4. Turn the Power Dial to adjust the volume up or down.

USB/SD Card Encoding

Record from TURNTABLE to USB drive or SD Card.

Before starting - Please action the following:

- Insert USB drive or SD card into the Port
1. Making sure a USB disk drive or SD Card is inserted into the USB Port on the turntable, press and hold **MODE/REC** at the front of the turntable for **2 SECS** to start recording. (1 beep sound will indicate it started recording)
 2. Follow the **Phono (RECORD)** on page 8 (previous page) to start playing your record disc.
 3. When you want to stop recording, press and hold **MODE/REC** at the front of your turntable for **2 SECS**. (2 beep sound will indicate it stopped).

USB/SD Card Media Playback

Before starting - Please action the following:

- Insert USB drive or SD card into the Port
1. Making sure a USB disk drive is inserted into the USB Port on the turntable, press and USB/REC at the front of the turntable to start playing Recordings/music files from your USB drive or SD Card.
 2. Use the control at the front of the turntable to navigate recordings/songs.

Note: if you want to clear USB of all media files, Press and hold **MODE/DEL** to format USB drive or SD Card. **DO NOT PRESS if you do not want everything removed on storage device.**

Basic Operation (Cont.)

AUX IN

Before starting - Please action the following:

- To use this mode, please have a 3.5mm AUX cable, this is so you can play music from your device through the Turntable speakers.
- Turntable will automatically change modes once AUX is plugged in.

1. Insert AUX IN cable in the back of the turntable, into your device you wish to play music from.

HEADPHONE

Before starting - Please action the following:

- To use this mode, plug in your headphones via the headphone jack inside the turntable below the power/volume dial.
- Turntable will automatically change modes once Headphone jack is plugged in.

Specifications

Power Input	5VDC 1A
USB Output	5VDC 0.5A
Power Consumption	5W
Audio Output	5W*2 - Built-in Speakers
Dimensions	380 (w) x 350 (d) x 705 (h) mm
Weights	Net: 6.63 kg / Gross: 7.68 kg

Brooklyn

CUSTOMER HELPLINE:

info@ayonz.com

DISTRIBUTED BY:

Ayonz Pty Ltd